

Interquartz to Plx Configurator

Model	CS500 Series & Savi 700 Series plus HL10	Savi W700 Series, WO100, WO200, WO350 plus HL10	CS60, CS70N, CS351N, CS361N & VOYAGER 510S plus HL10	SupraPlus, Tristar, DuoSet, EncorePro or Entera Headset plus Vista Cable (26716-01)
IQ330	TX Adjust 3, RX Adjust 3, Switch Position A For all telephone models except IQ330, IQ331, IQ333D see Note 3	TX Adjust 3, RX Adjust 3, Switch Position A For all telephone models except IQ330, IQ331, IQ333D see Note 3	TX Adjust B, RX Adjust 3, Switch Position 1 For all telephone models except IQ330, IQ331, IQ333D see Note 3	
IQ331				
IQ332				
IQ333EHS				✓ See note 2
IQ333				✓ See note 2
IQ333D				
IQ335				✓ See note 2
IQ260				✓ See note 2
IQ360				✓ See note 2
IQ560E				✓ See note 2
IQ750EHS				✓ See note 2
IQ750				✓ See note 2
Note 1. In the above setup details, "RX" = receiver or earpiece volume and "TX" = mouthpiece or microphone volume. Note 2: Set "V/P" Switch on phone to "V" position and "Headset Mic Adjust" control to maximum (fully clockwise) Note 3. Set "V/P" Switch on phone to "P" position and "Headset Mic Adjust" control to maximum (fully clockwise)				