



## Pairing IQ8050s to WPJ Base

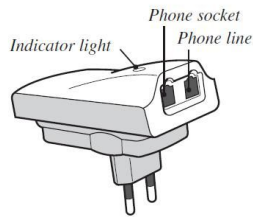

WPJ Base

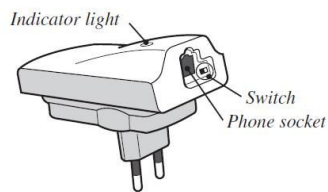

WPJ Extension



IQ8050s

1. Make sure the IQ8050s battery has been charged for at least 20min preferable 3 hours
2. Once the IQ8050s has charged you will need to do a "master reset" by doing the following
  - Enter Menu, \*, 6, 3, 2, \* to enter the admin menu
  - Go to Master Reset then press OK (middle D-PAD button) select Yes to confirm
3. Plug WPJ base and extension unit into the mains power "with the power turned off"
4. Connect a RJ12/11 link cable between the WPJ base and unit
5. Turn the power on for both the WPJ base and extension unit
6. Pairing will take less than 5 seconds and is completed when there is a steady green light on both
7. The WPJ and Extension unit is now paired so you now need to unplug RJ12/11 link cable going between the base and extension unit and start pairing the handset to the base
8. Cycle WPJ Base mains power off/on two (2) times at the wall
  - do not unplug extension unit
  - do not cycle the extension units power (separate power sockets)
  - no cables are to be connected to either the WPJ base or extension unit
9. The green LED on the WPJ Base will now be flashing constantly and will not stop flashing during the pairing process until after step 16.
10. If the WPJ Base LED does not flash on/off constantly signalling pairing mode then:
  - Telephone line is still plugged in to Base (disconnect cable go to step 8.)
  - extension unit is not plugged in to the mains power
  - WPJ Base needs resetting (see resetting base unit section below)
  - WPJ has not been paired to the extension unit (see resetting extension unit below)
11. On the IQ8050s enter Menu → Settings (D-Pad down x2) → OK → Connectivity (D-Pad right side x4)
12. Press OK to Register then select the first empty slot and press OK
13. Skip Park (Optional)
14. Enter 0000 as the pin code
15. Network Name leave blank (Optional)
16. Number leave blank (Optional)
17. IP8050s will now pair to WPJ base in less than 2 seconds
18. The WPJ base LED will stop flashing when the pairing is complete

\* Note: to pair more handsets to the same base repeat steps 1, 2, then 8-18

### Resetting the WPJ Base unit

1. Unplug all cables except the mains power
2. Cycle the mains power on/off 8 times (green LED should turn off every power cycle)
3. The green LED on the WPJ Base should now be flashing very fast
4. Plug in an RJ line cord from the extension to the Base unit
5. Wait for the WPJ Base's green LED to stop flashing
6. WPJ Base is now reset



### **Resetting or pairing a second extension unit**

1. Make sure everything but the mains power is unplugged on the extension
2. Cycle the power “slowly” five (5) times until you get a constant red LED (LED turns off briefly between each cycle)
3. Make sure the base is plugged into the mains power and turned on
4. Plug the RJ11/12 cable between the extension and the base unit
5. Wait five (5) seconds and the LED on the extension will change colour to confirm it is paired

*\*\* Note If multi-pairing IQ8050s handsets to multiple WPJ stand alone bases using a single shared extension unit, the extension must be reset between each pairing job.*